

Advisor II Instruction Manual

Setting the Alert

Reading Messages

Locking and Unlocking Messages

Deleting individual Messages

Setting Time and Date

Setting the Alarm

Other Notes

Back to Advisor II

TURNING YOUR PAGER ON

Press the green button.

Your pager alerts and a small circle is shown in the left column of the display.

The time and date are shown at the bottom of the display.

TURNING YOUR PAGER OFF

Press the red button to display the function menu.

Press the left arrow to the circle with the line through it.

Press the red button twice to turn the pager off.

RECEIVING AND READING YOUR MESSAGES

When a message is received, your pager alerts and displays a flashing triangle symbol.

Press any button to stop the alert.

Press the green button to display your message.

The pager automatically stores the message and the time and date it is received.

A flashing arrow at the bottom right corner of the screen indicates the message you are reading continues beyond the four lines of the display.

Press the green button to advance to the next screen of the message.

Press the down arrow to read your message line by line.

Press and hold the green button to rapidly scroll through your message, screen by screen.

If more than one message exists, press the right or left arrows to select the message you want to read.

The arrow symbol indicates the location of the message.

Press the green button to display your message.

While reading your messages, you can press either arrow to view the previous or next message.

A flashing small circle indicates that you have a message that has not been read.

The pager alerts at predetermined intervals to remind you of any unread messages.

The pager will store up to 19 personal messages in memory.

Back to Top

USING THE FUNCTION MENU

Press the red button to display the function menu.

The function menu gives you access to the many features of your pager through a series of symbols and prompts.

For example, when the function menu screen is first displayed, the double-arrow symbol flashes, indicating the present position of the cursor.

You can now press either right or left arrow to move the cursor within the function menu.

NOTE: To exit from any menu without making changes, press the green button.

Back to Top

BACKLIGHTING

The pager's backlight illuminates in low-light conditions when any button is pressed.

You can manually activate or deactivate the backlight at any time by pressing and holding the red button for two seconds.

If no other buttons are pressed, the backlight automatically turns off when the pager returns to the standby mode.

LOCKING AND UNLOCKING MESSAGES

Up to 10 messages can be locked in memory, preventing them from being replaced when Memory is full.

Press the green button.

Press either the right or left arrow to select the message to lock.

Press the red button to display the function menu.

Press the right arrow to move the cursor to the lock or unlock.

Press the red button to lock or unlock the message.

The lock or unlock symbol is displayed, indicating the status of the message in memory.

SETTING THE TIME AND DATE

Press the red button to display the function menu.

Press the left arrow to move the cursor to the clock picture.

Press the red button to display the set-time screen.

Press the right arrow to move the cursor to the hour digit.

Press the up or down arrow to adjust the hour.

Press the right button to move the cursor to the minute digit.

Press the up or down arrow to adjust the minute.

Repeat the process for each set of digits: AM/PM/24 hr., month/day/year.

Press the red button to activate the time and date change.

If you move the cursor past the last symbol in the row (far right), it automatically wraps around and displays at the first symbol in the beginning of the same row (far left).

NOTE: To exit from any menu without making changes, press the green button.

Back to Top

SETTING THE ALARM

The alarm on your pager can be set for specific time and date, or it can be used as a daily alarm.

To set the alarm for a specific time and date:

Press the red button to display the function menu.

Press the left arrow to move the cursor to the clock picture.

Press the red button to display the set-time-and-alarm screen.

Press the down arrow to move the cursor to the alarm symbol.

The alarm symbol defines the alarm status - either alarm enabled, or disabled (with a line through the symbol).

Press the right arrow to move the cursor to the alarm symbol.

Press the up or down arrow to enable or disable the alarm.

Press the right arrow to move the cursor to the hour digit.

Repeat the process for each entry (minute, AM/PM, and date).

Press the red button to activate your selection.

The alarm symbol is shown on the display.

At the selected time, your pager emits a 12-second audible alert even if the pager is in the silent mode.

To set the alarm to alert daily:

Follow the steps previously described, except when setting the date, press the down arrow for the date entries until you see a blank month, day, and year (--/--/--).

The alarm is now set to alert every day at this specified time.

NOTE: To exit from any menu without making changes, press the green button.

Back to Top

SETTING THE MESSAGE ALARM

This feature allows you to set a one-time or a daily alarm for a particular personal message.

You can set an alarm for up to five personal messages.

To set a one-time message alarm:

Press the green button.

Press the right or left arrow to select the message you want to alarm.

Press the red button to display the function menu.

Press the right arrow to move the cursor to the alarm symbol.

Press the red button to display the set-message-alarm screen.

When the screen is first displayed, the cursor is at the far left position.

This symbol defines the alarm status - either alarm enabled or disabled (with a line through the symbol).

From the set-message-alarm screen, follow the same steps described in Setting the Alarm.

To set a daily message alarm:

Follow the instructions above to set the alarm time, then follow the instructions in "To set the alarm to alert daily" under Setting the Alarm.

The alarm symbol replaces the up triangle symbol when the message alarm is set.

At the selected time, your pager vibrates or emits a 12-second alert, depending on the current alert mode.

Press the green arrow to display the message for which the alarm is set.

The triangle symbol replaces the alarm symbol after the alarm has sounded unless the alarm is set to alert daily.

NOTE: If the alarm expires without being acknowledged, the alarm symbol flashes until the message is read.

SETTING THE ALERT MODE

The alert can be set as either audible or silent.

Press the red button to display the function menu.

Press the left arrow to move the cursor to the speaker symbol or speaker symbol with a line through it.

The speaker symbol is displayed if the pager is in the silent alert mode (prompting you to enter the audible mode if desired).

The speaker with a line through it symbol is displayed if the pager is in the audible alert mode (prompting you to enter the silent mode, if desired).

Press the red button to select the desired alert mode.

If the selected mode is audible, your pager emits a short chirp.

If the selected mode is silent, your pager vibrates.

[Back to Top](#)

SETTING THE ALERT MODE

The alert can be set as either audible or silent.

Press the red button to display the function menu.

Press the left arrow to move the cursor to the speaker symbol or speaker symbol with a line through it.

The speaker symbol is displayed if the pager is in the silent alert mode (prompting you to enter the audible mode if desired).

The speaker with a line through it symbol is displayed if the pager is in the audible alert mode (prompting you to enter the silent mode, if desired).

Press the red button to select the desired alert mode.

If the selected mode is audible, your pager emits a short chirp.

If the selected mode is silent, your pager vibrates.

[Back to Top](#)

SETTING THE ALERT PATTERN

NOTE: The pager must be in the audible alert mode to select the alert pattern. Your pager has a standard alert (1), seven different pleasing alerts (2 through 8), and a chirping alert (musical note symbol), allowing you to select and change the alert. You can also select no alert.

To change your alert, press the red button to display the function menu. Press the left arrow to move the cursor to the musical note symbol, then press the red button.

Press the right or left arrow to move the cursor to the desired alert. The pager gives a sample of each alert when scrolling through the selections. Press the red button to activate the alert.

DELETING MESSAGES FROM MEMORY

You can delete an unlocked and un-alarmed message from memory while you are viewing the message or through the function menu.

To delete messages using the function menu:

Press the right or left arrow to select the message you want to delete from memory.

Press the red button to display the function menu.

Press the right arrow to move the cursor to the box symbol (with a line through it).

Press the red button to receive confirmation of the request.

Press the red button to delete the message.

To delete all unlocked, un-armed and read messages from memory:

Press the red button to display the function menu.

Press the right arrow to move the cursor to the box with an "X" through it.

Press the red button twice.

All unlocked, un-alarmed and read messages are now deleted.

NOTE: Personal and maildrop notebooks are not deleted with this feature.

[Back to Top](#)

MOVING MESSAGES TO YOUR NOTEBOOK

Press the green button.

Press the right or left arrow to move the cursor to select the message you desire to move into your personal notebook.

Press the red button to display the function menu.

Press the right arrow to move the cursor to the "stickman" symbol.

Press the red button to move the message into your personal notebook.

The "stickman" symbol is shown in the top right-hand corner of the display.

SETTING AUTO ON/OFF

Press the red button to display the function menu.

Press the left arrow to move the cursor to the "backwards C" with a "+" in it symbol.

Press the red button to display the auto on/off screen.

When the screen is first displayed, the cursor is at the farthest left position. The enabled (with the "+" sign) or disabled (no "+" sign) symbol indicates the current status.

Press the up or down arrow to select "enabled" or "disabled".

Press the right arrow to move the cursor to the hour digit.

The Auto On time is displayed on the left and the Auto Off time is displayed on the right.

Press the up or down arrow to adjust the hour.

Repeat the process for each set of digits for both the on time and the off time (hour, minute AM/PM if your pager is set to display time in the 12 hour mode).

Press the red button to activate auto on/off.

NOTE: If the on time is equal to the off time, the pager does not enable the auto on/off function.

[Back to Top](#)

OTHER FEATURES:

Battery Gauge: The battery gauge indicator is located on the status screen and keeps you informed of the battery energy level.

Duplicate Message: If the same message is received more than once, "DUPLICATE MESSAGE" is displayed at the beginning of the new message. The new message contains the latest time and date stamp.

Out of Range: When this is enabled, the antenna symbols are displayed whenever you are out of range of the paging transmitter. The symbols may also show up when you are in range, if transmitter activity is idle for short periods of time, so don't be alarmed if it displays while within range.

Errored Data Indicator: The "checkered box" symbol displays when potentially corrupt data is received. The indicator alternates with the corrupted character.

BATTERY INFORMATION

Your pager is designed to operate with a single AA-size alkaline battery (carbon zinc batteries are not recommended).

To install or replace the battery, place the pager face down and proceed as follows:

Unlock the battery door by sliding the door latch away from the battery door.

Slide the battery door in the direction of the arrow (toward the outer edge).

Lift the battery door away from the housing to remove it.

Lift the battery out of the battery compartment, taking note of the positive (+) and negative (-) markings on the battery and pager housing.

To install a new battery, reverse this procedure, taking note of the positive (+) and negative (-) markings.

CAUTION: Do not insert the battery backwards or the messages stored or locked in memory will be erased.

CARE OF YOUR PAGER

To maintain the fine optical quality of the display in the pager, do not subject it to extreme temperatures and moisture.